


**601 Ladies Dress Form with Hip
Installation Guide**

Please check the following items in your package. If anything is missing or damaged, please contact your dealer immediately.

7 ITEMS

- | | |
|-------------------------|--------------|
| (1) BASE | 1 pc. |
| (2) SPRING | 1 pc. |
| (3) INNER POLE | 1 pc. |
| (4) OUTER POLE | 1 pc. |
| (5) DRESS FORM | 1 pc. |
| (6) TOPPER | 1 pc. |
| (7) L-SHAPE TOOL | 1 pc. |

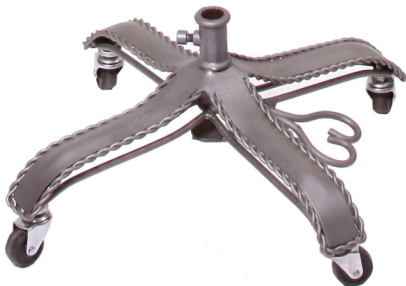

(1)



(3)



(4)



(5)



(2)



(6)




(7)



Step 1

Place **BASE** (Item 1) firmly on the ground.

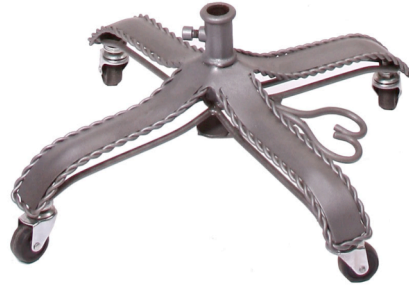


Step 2

Insert **SPRING** (Item 2) through bottom end of **INNER POLE** (Item 3)




Step 3

Insert **INNER POLE** (Item 3) into the **BASE** (Item 1) all the way to the bottom until foot pedal flip up.

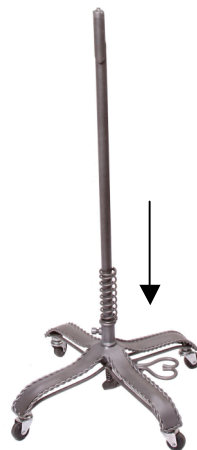


Step 4

Use the provided L-Shape tool (Item 7) to tighten the INNER POLE and BASE.

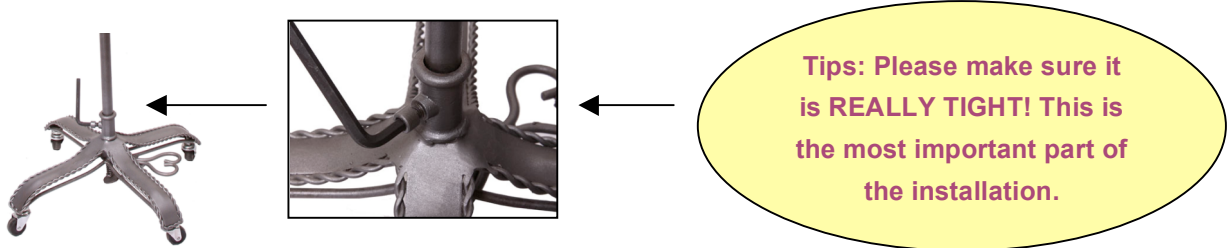

Step 5

Slide OUTER POLE (Item 4) through INNER POLE (Item 3) while stepping on the pedal. Stepping on the pedal makes the “cut” at the top of INNER POLE align.

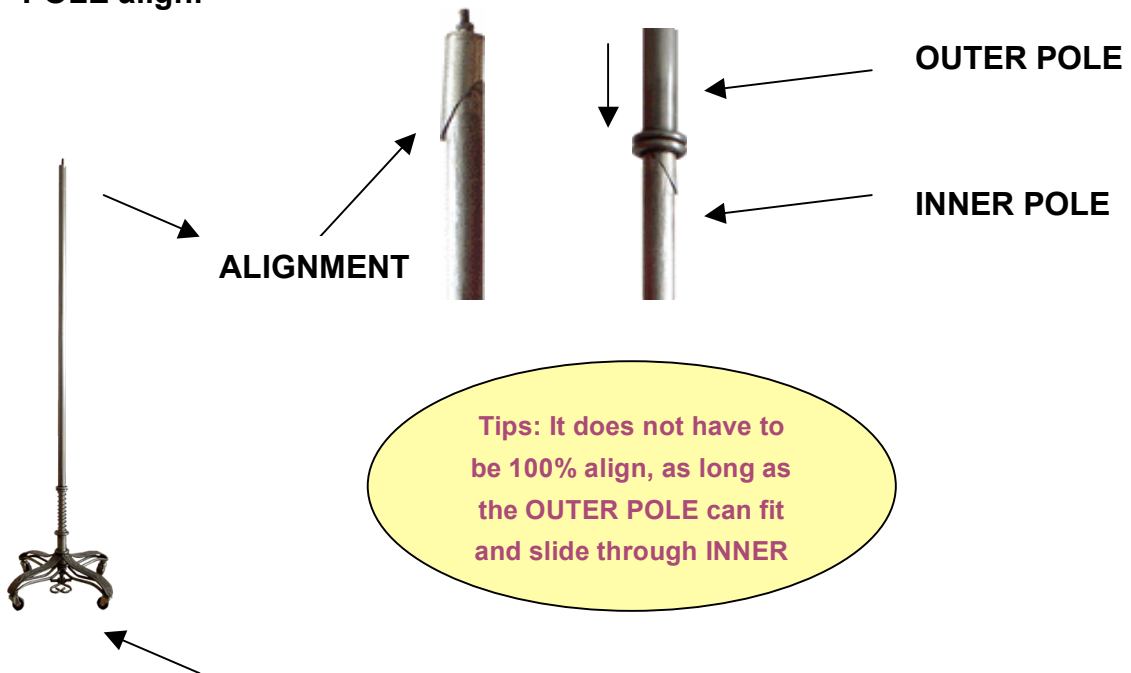

The top of INNER POLE should align as shown above while stepping on the foot pedal.

Step 6

**Put the DRESS FORM
over OUTER POLE.**



Step 7

**Twist TOPPER on the
DRESS FORM.**



Congratulation! Installation Complete!

Tips

- **When adjusting the height and turning dress form left and right, please step onto the pedal, if not, you might damage the interior structure of the dress form.**
- **You can easily adjust the height to your preference by stepping on the front portion of the pedal.**