

912F PGM Belt/Tie Rack

Assembling Guide

- (1) BASE
- (2) COIL
- (3) POLE 1
- (4) POLE 2
- (5) ROUND PLATE 1
- (6) ROUND PLATE 2
- (7) SCREW (2 pcs)
- (8) TOPPER



(1)



(2)




(7)




(8)



(3) (4)

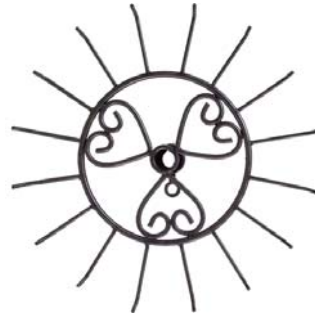

(5)

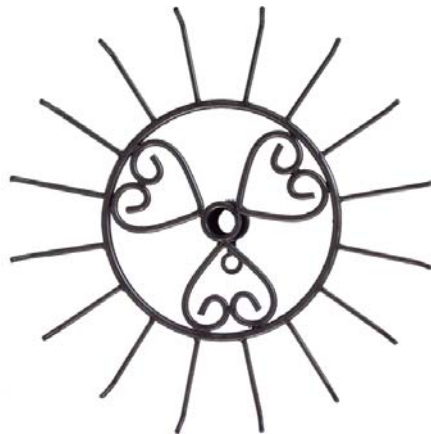

(6)

Step 2

Gently place COIL on top of the BASE to prepare for Step 3.




Step 1

Plant BASE firmly on the ground.

Step 3

Insert POLE 1 into the BASE through COIL.

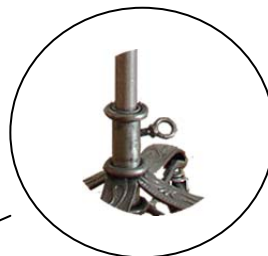


Make sure to twist the screw tightly after POLE 1 is inserted into the BASE completely.



Step 4

Slide POLE 2 over POLE 1 in preparation for Step 5.

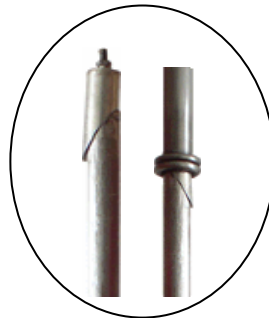

The top of POLE1 should be closed like this when stepping down the foot pedal.

When you are sliding POLE 2 over POLE 1, make sure you are stepping down on the foot pedal with the top of POLE 1 closed

Step 5

Install ROUND PLATE 2



Install SCREW first before slide in ROUND PLATE 2, and make sure to twist tightly





Step 6

Install ROUND PLATE 1.



Install SCREW first before slide in ROUND PLATE 1,
and make sure to twist the screw tightly

Step 7

Last step, install TOPPER on.

**Congratulations !!!!!
Installation complete.**

